

# A FLECK PERFORMANCE BULLETIN

Bulletin No. 332



Product    Application    Service    General   **news from Fleck Controls**  
November 20, 1997

## 3200 TIMER TO HAVE ADJUSTABLE TIME OF REGENERATION

We have redesigned the 24 hour dial of the 3200 Timer so that the regeneration time can be field adjusted. This has been a request from our customers so they can use the 3200 timer in place of the 3000 timer. This change will take place on December 1st.

### To adjust the timer, follow these easy steps:

1. Disconnect the power source.
2. Locate the three screws behind the manual regeneration knob by pushing the red button in and rotating the 24 hour dial until each screw appears in the cut out portion of the manual regeneration knob. (Figure B)
3. Loosen each screw slightly to release the pressure on the time plate from the 24 hour gear.
4. Locate the regeneration time pointer on the inside of the 24 hour dial in the cut out. (Figure A)
5. Turn the time plate so the desired regeneration time aligns next to the raised arrow. (Figure A)
6. Push the red button in and rotate the 24 hour dial. Tighten each of the three screws.
7. Push the red button and locate the pointer one more time to ensure the desired regeneration time is correct.
8. Reset the time of day and restore power to the unit.

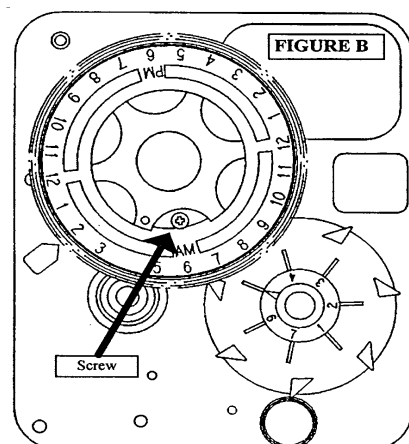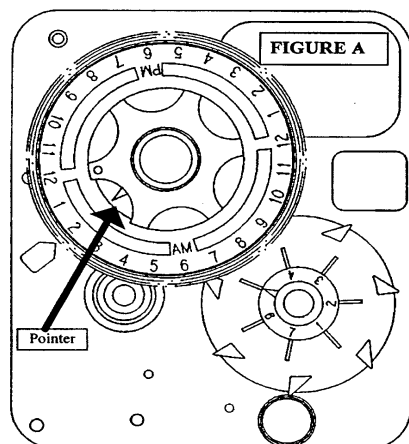

As always, thank you for using Fleck Controls.

Sincerely,

Fleck Controls, Inc.  
Technical Product Support