



PERFORMANCE BULLETIN

Product Application Service General news from


February 2, 2004



The 7000 Quick Connect Clips

The 7000 quick connect clips are designed with a safety feature that will **not** allow the clips to be removed while the valve is pressurized. When the valve has been in long term use the o-rings can take hold, therefore, when attempting to remove any quick connect clips you must first depressurize the control and push the parts together before attempting to remove the clip.

For example: If removing the injector cap from the 7000 valve body
1. First depressurize the control and push the injector cap downwards
2. Next easily remove clip by prying out with a flathead screw driver

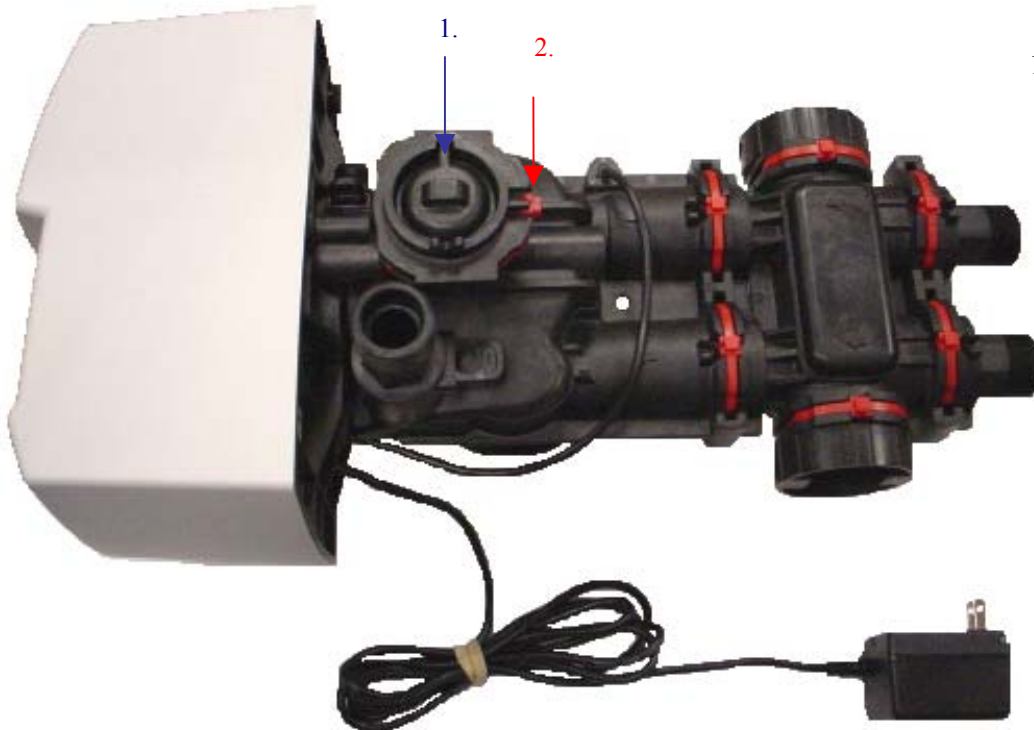

Note: The clips that are red can be used as a tool to remove the injector assembly



Injector
Assembly

As always, thank you for using Fleck controls.

Sincerely,
Pentair Water Treatment, Inc.

Ken Mills
Technical Sales/Support